# HIGH BRIGHTNESS AND ACCURACY DIGITAL LED INDICATORS

MODULAR INDICATORS / TOTALIZERS WITH UNIVERSAL ANALOG INPUT

# S311A-4



# 4-digit display indicatortotalizer with universal analog input

S311A is a high performance compact/modular indicator/totalizers. Theseriesoffersdisplaychoicewith4,6,8,4+7digits in multiple visualization mode (real-time, integrated, totalized measured values).


S-Line indicators support universal input (analog, digital, by sensor) and re-transmitted output mA, V standard.

Concerning power supply they ensure an extended range of options: 80-265 Vac; 10-40 Vdc / 19-28 Vac loop powered.

Accuracyclassreach0,1% with14-16bitA/Dconversion. Optionally S-Line indicators can provide ModBUS interface alarm relay (hysteresys and threshold control) and IP66 case. Besides front key buttons, settings are made by PC software EASY SETUP.

#### **GENERAL DATA** Power Supply 80-265 Vac (H version) 10-40 Vdc / 19-28 Vac (L version) Power transducers Max 18 V, 25 mA (active input) Power consumption (max) Isolation 1.500 Vac Communication interface ModBUS RTU slave (optional board) Operating temperature -10..+60 °C Front protection degree **Terminals** Removable, pitch 3,5 - 5,08 mm Dimension 96y48y98 mm Weight 200 g 4 digit LED Display LED status indicators 2 alarm LEDS (threshold enabling) Front keys 3 front panel key navigation button Accuracy Settings EASY SETUP software, front key buttons Special functions Integrator CE Approvals **INPUT DATA** Channels 1 Voltage: 0-10 V Type and range Active / Passive Current: 0-20 mΑ Potentiometer: 1..100 k $\Omega$ Pt100 2,3,4 fili (IEC 751 / EN 60751 – ITS90) Thermocouple J,K,R,S,T,B,E,N Frequency Reset Yes: by digital input and front key buttons **OUTPUT DATA** Channels Type and range 0-10 V (min 1KΩ) 0-20 / 4-20 mA (max 500 Nr 2 SPDT 220 Vac 5A Relay output (resistive), 2A (inductive) -

optional board

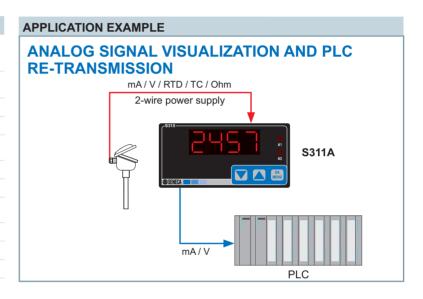




- Power transducers
- Input: mA, V, Ohm, Pt100, TC
- Values totalization

## **BUTTONS AND TERMINALS POSITION**

#### FRONTAL PANEL: BUTTONS AND LEDS



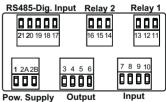

**REAR SIDE: TERMINALS** 

The terminals from 11 to 21 are present only in case of optional card use.

## **SUMMARY OF BUTTONS ACTIONS (in view mode)**

Access to programming Menu	OK MENÚ Access to Quick Alarms Menu
If Funt=0 has been set, the indicator switches to the instantaneous view (except 11 digits model).	If FUn[=0 has been set, the indicator switches to the integrator view (except 11 digits model).
Retained Alarms reset.	Integrator Reset (if this functionality it has been enabled by setting ! rE5=0).